


Ridge (Non-Vented)
with Ridge Clips

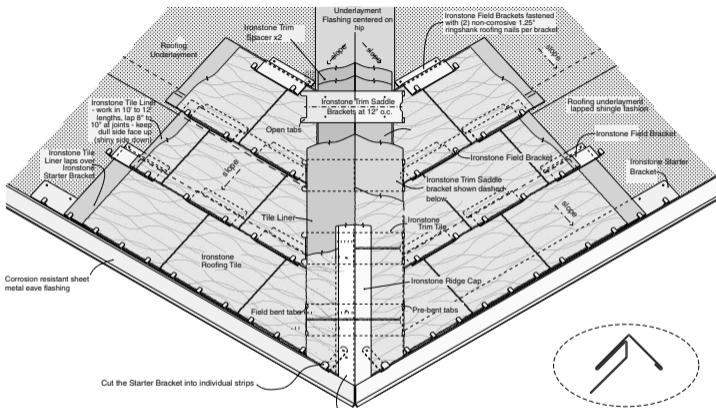

Corrosion resistant sheet metal eave flashing


Cut the Starter Bracket into individual strips

Ensure fastener flange is aligned with 'Open Tab' side of Ironstone Trim Saddle Bracket.




Ironstone Ridge Cap Profile


Hip with Ridge Cap Trim

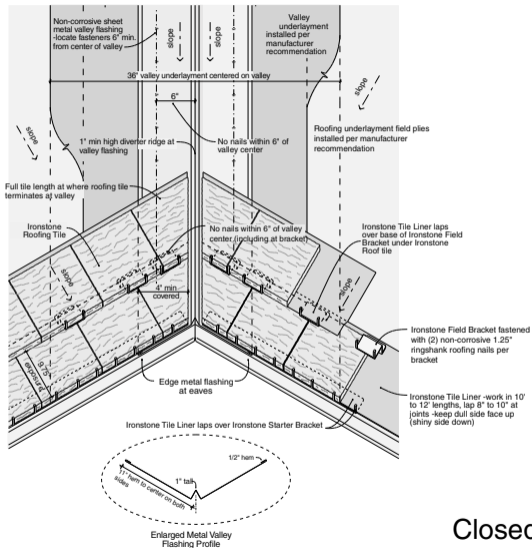



Closed Valley

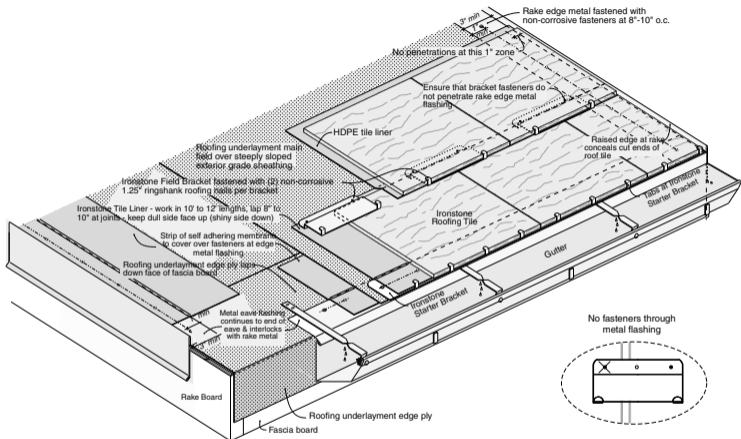


Eave at Rake with Gutter

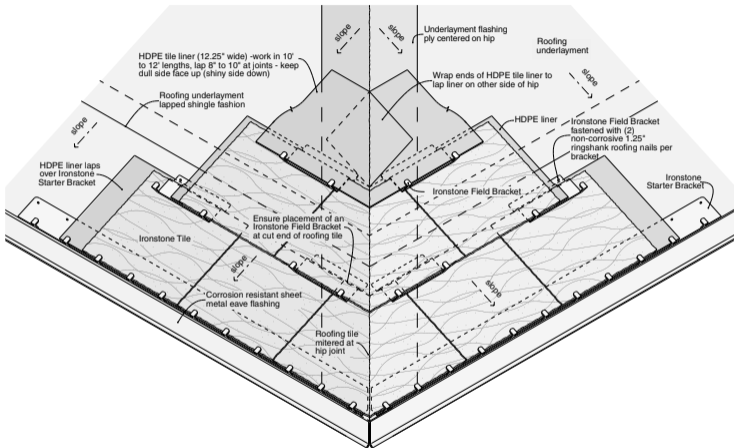


Roofing at Mitered Hip

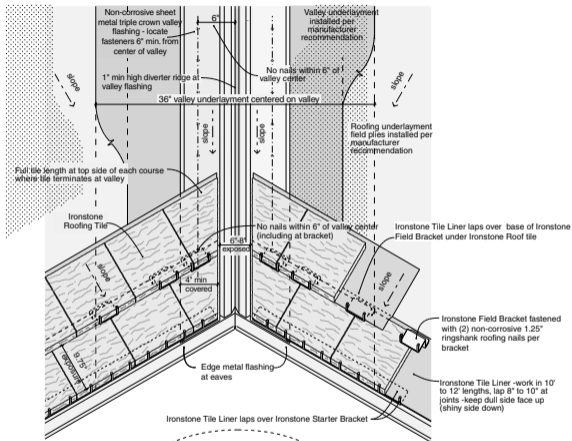


Open Valley

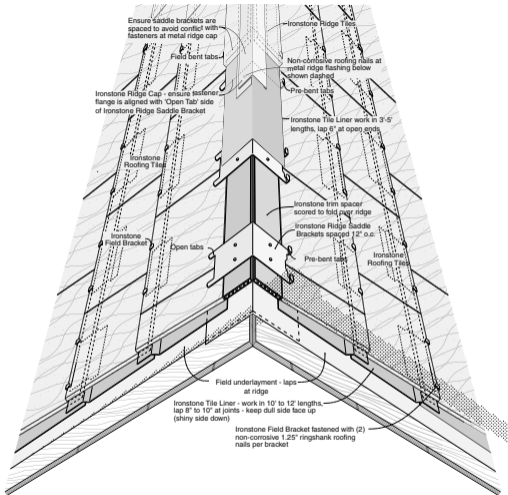


Ridge(Non-Vented)
with Ridge Cap

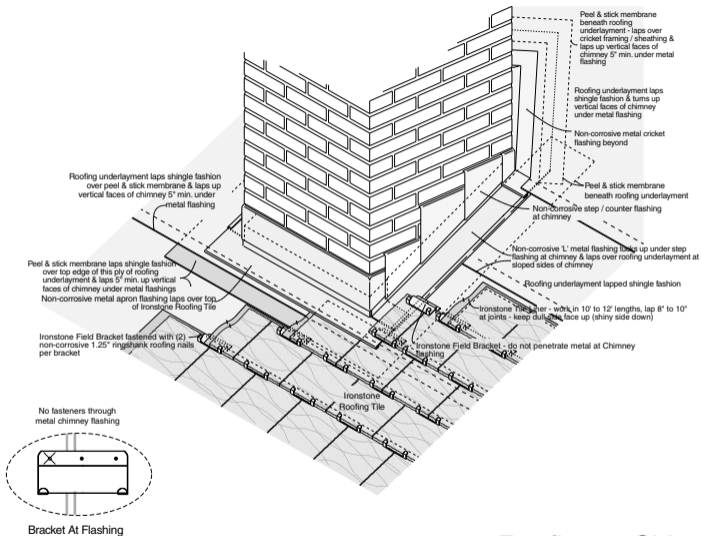

Roofing at Chimney

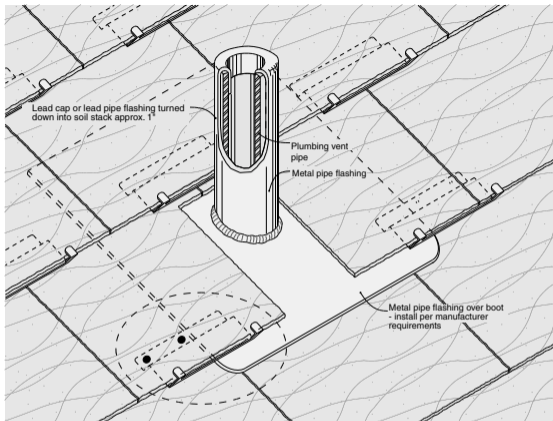

No fasteners through
metal flashing



Roofing at Plumbing Vent